



www.insize.com



OPERATION MANUAL

**Mode ISU-250C
Ultrasonic Thickness Gauge**



Content

1. Technical specification-----	2
2. Standard delivery-----	2
3. Optional transducers-----	2
4. Overview the display unit-----	3
5. Keypad functions-----	3
6. Display screen-----	4
7. Basic gauge operations-----	5
7.1 Swich on-----	5
7.2 Probe zero-----	5
7.3 Backlight-----	5
7.4 Parameters setting-----	5
7.4.1 Measurement mode-----	5
7.4.2 Other parameters setting-----	6
7.4.2.1 Velocity rate-----	6
7.4.2.2 Resolution-----	7
7.4.2.3 Calibration-----	8
7.4.3 Memory-----	7
7.4.3.1 Memory unit-----	7
7.4.3.2 Memory read-----	8
7.4.3.3 Delete all memory-----	8
7.4.4 Date transfer-----	8
7.4.5 Function-----	8
7.4.5.1 Power off-----	8
7.4.5.2 Gain adjustment-----	9
7.4.5.3 Default-----	9
7.4.5.4 Information-----	9

Glycerin	0.075	1900
Gold	0.130	3200
Ice	0.160	4000
Inconel	0.220	5700
Iron	0.230	5900
Iron (cast)	0.180	4600
Lead	0.085	2200
Magnesium	0.230	5800
Mercury	0.057	1400
Molybdenum	0.250	6300
Monel	0.210	5400
Neoprene	0.063	1600
Nickel	0.220	5600
Nylon, 6.6	0.100	2600
Oil (SAE 30)	0.067	1700
Platinum	0.130	3300
Plexiglass	0.110	1700
Polythylene	0.070	1900
Polystyrene	0.093	2400
Polyurethane	0.0700	1900
Quartz	0.230	5800
Rubber, Buty	0.070	1800
Silver	0.140	3600
Steel, Mild	0.233	5920
Steel, Stainless	0.228	5800
Teflon	0.060	1400
Tin	0.130	3300
Titanium	0.240	6100
Tungsten	0.200	5200
Uranium	0.130	3400
Water	0.584	1480
Zinc	0.170	4200

7.4.5.2 Gain adjustment

- Press  into the “Gain adjustment”, the screen will display:
1. High 2. Medium 3. Low 4. Automatic
- Press  or  to select desired item.
- Press  confirm.

7.4.5.3 Default

When the “ Default ”is selected , the gauge will recover the default parameter.

7.4.5.4 Information

The screen display the supplier info, version number and transducer number.

APPENDIX:

All velocities are approximations:

SOUND VELOCITY MEASUREMENT CHART

Material	Sound Velocity	
	Inch/μS	M/s
Air	0.013	330
Aluminum	0.250	6300
Alumina Oxide	0.390	9900
Beryllium	0.510	12900
Boron Carbide	0.430	11000
Brass	0.170	4300
Cadmium	0.110	2800
Copper	0.180	4700
Glass(crown)	0.210	5300

1. Technical Specification

Measurement range	0.65mm~400.0mm
Resolution	0.01mm(0.001"), 0.1mm (0.01")
Velocity range	1000m/s~9999m/s
Measurement rate	4 /s and 10/s in fast mode
Average mode	2 to 9 times average measurement
Limited setting	With Low-high indication and alarm
Measuring Units	Mm / inch
Memory	Memory of 5000 readings with location number
Data output	USB to PC
Display	128×64 LCD with back light
Battery	2 x AAA Batteries
Operating temperature	-20℃ ~+50℃
Measuring temperature	-20℃ ~+350℃(according to the probes)
Dimensions	116mm(L)×64mm(W)×27mm(H)
Weight	0.22kg (including batteries)


2. Standard delivery

- Main unit
- Standard 5MHZ transducer
- 4 oz couplant
- Two AAA batteries
- Software and USB cable
- Build-in calibration block
- Carrying case
- Operating manual
- Certificate

3. Optional transducers

Code	Measuring Range	Frequency	Temperature
ISU-T12	2.0-400mm/0.08-16.00"	2.0MHZ	<60°C/ 140° F
ISU-T06	0.7-50mm/0.03-2.00"	7.5MHZ	<60°C/ 140° F
ISU-T08	0.8-300mm/0.03-12.00"	5.0MHZ	<60°C/ 140° F
ISU-T13	3.0-100mm/0.08-4.00"	5.0MHZ	<350°C/662° F

4. Overview the display unit

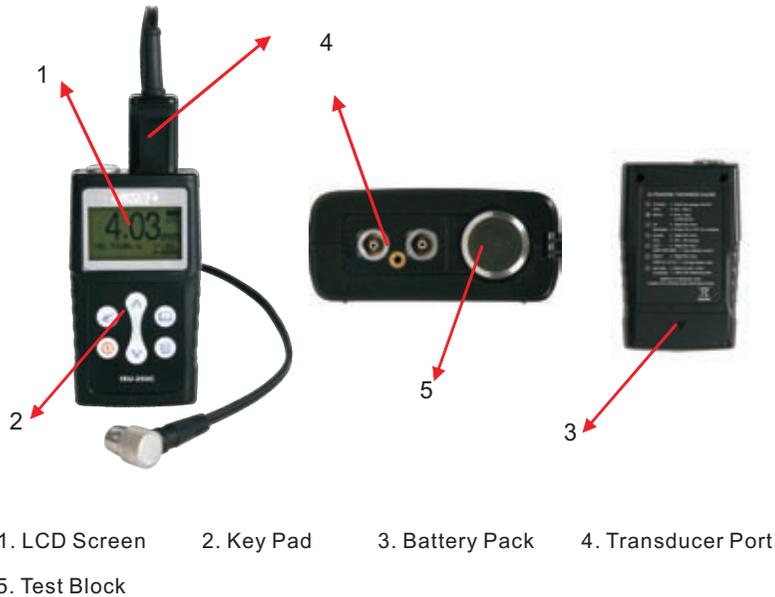

5. Keypad functions

- After taking every measurement, press key to store the value with a location number.

7.4.3.2 Memory read

- press Read (Under the measurement).
- Into the "Memory Read", Press and to select desired Alphabet, Press and to select initial number. Then the desired group of value can be readable beginning from this initial number.

7.4.3.3 Delete all memory

- Delete all memory.

7.4.4 Date transfer

- Press into the menu.
- Press or into "Date Transfer", the screen will display.
- The data can be transferred to PC using the data view and can be stored as DOC. ,TXT. Or Excel. For more detailed information, refer to the "Installation Manual" enclosed in the CD.

7.4.5 Function

- Press into the menu, press or into "FUNCTION", the screen will display:
 1. Power off 2. Gain adjustment 3. Default
 4. Information
- Press or into the selected item, press to confirm.

7.4.5.1 Power off

Auto shut down after 1 Min. 3 Min. 5 Min. or Never can be selectable.

- Press  or  to up and down the value of velocity to determine the thickness as the same as the value of sample that is measured.
- Press  key to confirm.

7.4.2.2 Resolution

- Press  key into “Resolution”.
- Press  or  to select resolution and unit.

1.0.1mm	2.0.01mm
3.0.01in	4.0.001in
- Press  key to enter/confirm.

7.4.2.3 Calibration

- Press  into menu.
- Press  or  into “Calibration”.
- Measure the test piece with known thickness.
- If measured value is different than the known value of the test piece, adjust the measured value by pressing  or  and then press . The gauge will return to measure mode.

7.4.3 Memory

- Press  into the menu.
- press  or  into “Memory”, the screen will display.

1. Memory Unit	2. Delete ALL Memory
----------------	----------------------
- Press  or  into the selected item, press  to confirm.

7.4.3.1 Memory unit

- The gauge has a memory capacity of 5000 measurements. The memory location was composed by alphabet A-Z + 0000-4999. You can select an Alphabet + an initial number freely for beginning to store the value and the next number will be followed automatically.



Key	Function
	--On/Off Key --Esc. Menu
	--Menu Key --Confirm Key
	--Up Arrow Key --Backlight Key (Under the measurement)
	--Down Arrow Key --Calibration Key (Under the measurement)
	--Left Arrow Key --Storage Key (Under the measurement)
	--Right Arrow Key --Read data (Under the measurement)

6. Display screen



- ①  Battery life
- ② Current velocity
- ③ Current transducer model
- ④ Measurement value and measurement mode
- ⑤ Current memory location

7. Basic gauge operations

7.1 Switch on

Presskey  to turn on the gauge.

7.2 Probe zero

- The gauge does an automatic zeroing of the transducer thus eliminating the need for an on-block zero. And then the gauge came into the measurement mode directly.
- Please make sure the transducer is not coupled to the test piece when the gauge is first turned on and that there is no coolant on the end of the transducer. The transducer should also be at the room temperature, clean without any noticeable wear.

7.3 Backlight

Press  to tuen on / off the backlight.

7.4 Parameters setting

7.4.1 Measurement mode

- Press  into the measurement mode setting
- Press  or  to select desired measurment mode.

ISU-250C Ultrasonic Thickness Gauge offers two measurement modes, they are T-E Mode and Scan.

T-Mode

1. STANDARD - It is available for the normal measurement.
2. MINIMU+M - The gauge will catch and display the minimum measured thickness during one measurement process. It is

available for measuring the thickness of curve surface or pipe.

3. DIFFERENCE - The gauge will display a thickness value as an absolute number of what has been inputted. For example, input value = 5.00mm and the real thickness is 5.03mm, the display will show diff 0.03mm. If the real value is 4.97 m, the gauge will display, -0.03mm.

4.AVERAGE - The gauge will display the average thickness of 2-9 measurements

5. LIMITATION – The gauge will alarm you of low or high thresholds via audible sound.

E-E Mode

The Echo-to-Echo option allows you to make measurements between two consecutive backwall echoes. Therefore, a good usage of the Echo-to-Echo option is for measuring through coatings to measure only the true metal thickness.

SCAN

The gauge will alarm for each fast measurement. And will display the all measured thickness upon the complete measurement finished. It is available for measuring the thickness of test piece with high temperature surface.

- Press  to confirm selection.
- Press  to Esc. Menu and into the measurement.

7.4.2 Other parameters setting.

Press  and then press  into the setting.

7.4.2.1 Velocity rate

1. Velocity Setting

- Press  into“ VEL. SETTING” state.
- There are 9 velocities for materials pre-stored in gauge. You can select one by pressing  or .
- Press  to confirm.

2. Velocity measurement

- Measuring the sample which thickness is known.
- Press  key into“ Velocity measurement ”state.